


# Wifi Digital Photoframe

# Jessica/Felia



# User Manual

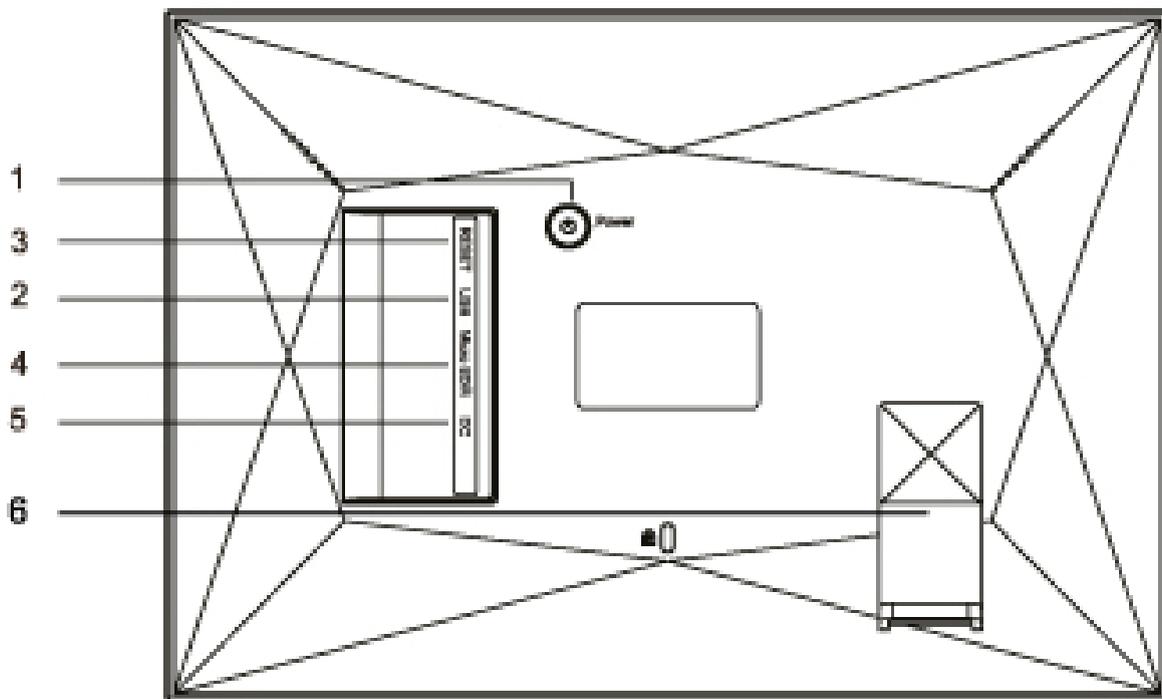

## 1. Power on button

After connecting the power adapter, please press and hold the power button for approximately 5 seconds (until screen turns on).

When it is on, press and hold the power button for approximately 3 seconds to access reboot or power off menu.

Short pressing the power button will turn the screen on/off (but leaves the WiFi Photo Frame on).

## 2. USB port

Connect a Micro-USB flash drive. Or use the cable provided to attach a standard USB Drive.

## 3. RESET

Use a needle or paperclip to reset the Device

## 4. MicroSD Card port

Insert a MicroSD memory card here (max. 32 GB).

## 5. Power connector

Connect DC Adapter to power on the device.

## 6. Stand mounting and Photo frame position.

The stand can be attached here in 2 ways to place the photoframe in either horizontal (landscape) or vertical (portrait) position.

## Contents

<b>Contents</b>	<b>1</b>
<b>Getting started</b>	<b>4</b>
Frameo app	4
<b>Frameo quick setup</b>	<b>5</b>
<b>Start using Frameo</b>	<b>6</b>
Connecting a new friend	6
<b>Navigating your Frameo</b>	<b>7</b>
Add friend	7
Gallery	7
Settings	7
Hide photo	7
Fit to frame/Fill frame	7
Adjust photo	8
Interacting with videos	8
Power menu	8
<b>Settings</b>	<b>9</b>
My frame	9
Frame name	9
Frame location	9
Set language	9
Set time zone	9
Enable/Disable 24-hour format	9
Manage photos	9
Show/hide photos	9
Delete photos	10
Import photos	10
Export photos	10

My Friends	10
Change options for a friend	10
Add person	11
Display	11
Brightness level	11
Sleep mode	11
Slideshow	11
Timer	11
Show caption	11
Fill frame	11
Photo display order	11
Autoplay	12
Video playback	12
Playback audio	12
Video volume	12
Wi-Fi	12
Wi-Fi details	12
Reset Wi-Fi	12
Notifications	13
Show notifications	13
Notification volume	13
Storage space	13
Backup	13
Network connection	13
New photos	13
New friends	13
Software update	13
Feature news	13
Backup and Restore	14
Backup frame to external storage (e.g. microSD card)	14

Automatic backup	14
Restore from backup	14
Reset frame	14
Help	14
Open source libraries	14
Share anonymous analytics data	15
Guide	15
About	15
Android version	15
Peer ID	15
MAC	15
Frameo version	15
Up time	15
Check for update	15
Beta program	15
<b>Privacy</b>	<b>16</b>
<b>Support</b>	<b>16</b>
<b>Warranty, Compliance, Support and Safety information</b>	<b>16</b>

## Getting started

Thank you for buying an Innovu WiFi Digital Photo Frame


Congratulations with your brand new Jessica/Felia WiFi Digitale Photo Frame!

If you are new to using a WiFi Digital Photo Frame then start by following the Frameo quick setup or follow the on-screen guide when powering it on for the first time. Once you have set up your WiFi Digital Photo Frame, you can start connecting it to your friends and family.

Once you have set up your Frameo frame, you can start connecting it to your friends and family.

### Frameo app

To send photos to your frame, use the Frameo app for iOS or Android.

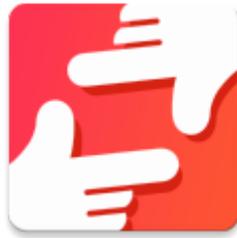

Find the Frameo app by scanning this code:



For Android:

Search for “Frameo” on [Google Play](#).

For iOS:

Search for “Frameo” on [App Store](#).

## Frameo quick setup

When starting your Jessica/Felia WiFi Digital Photo Frame for the first time, you will need to setup the Jessica/Felia frame.

- Select a language. This will be the language used on the Jessica/Felia frame..
- Connect your Jessica/Felia frame. to the internet by connecting it to a Wi-Fi.
- Jessica/Felia frame. may ask you to update to the latest version. *It is recommended to update your Jessica/Felia frame. before continuing if asked to.*
- Enter your name, and the location where you have placed your frame e.g. “John Doe” and “Living room”, “Kitchen” or “Office”. Finally set the timezone if not already correct.

## Start using Frameo

Next step is to connect the Frameo App with your friends and family by providing them with a code from your Jessica/Felia frame.

If you want to be able to send photos to the frame yourself, start by downloading the app for iOS or Android on App Store or Google Play . Then use the code to connect your Jessica/Felia frame. and app as described below.

### Connecting a new friend

Make sure that your friend has downloaded and installed the Frameo app.

Click the add friend icon on your frame  . A dialog will appear showing a connection code, which is valid for 12 hours.

Now share this code in whatever fashion you prefer e.g. SMS, E-Mail, IM, phone call, to your friend.

Once your friends have added the code in their Frameo app, they will automatically appear on your frame and be able to send you photos.


Read chapter [Change options for a friend](#) to *allow* connected friends, to retrieve and share the connection code via the smartphone app.



## Navigating your Frameo

Swipe left or right to go through your photos.

To access the menu, simply tap once on the screen.

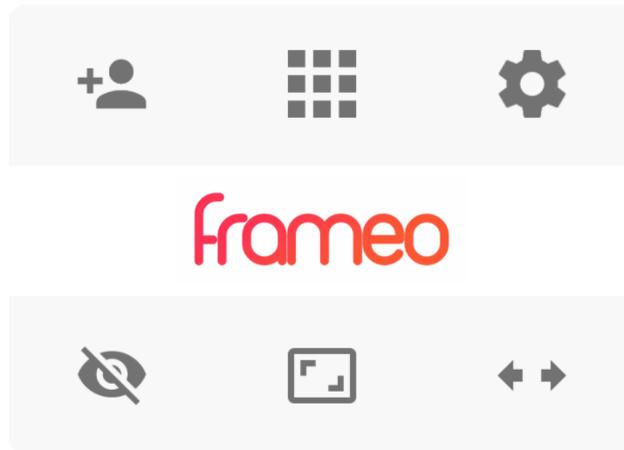

In the menu you will find the most used features.

### **Add friend**

This will generate a code that you can share with your friends and family so they can connect and send photos to your frame.

### **Gallery**

Opens a gallery which allows for easy and fast navigation through your photos.

### **Settings**

Opens the [Settings](#).

### **Hide photo**

Hides the current photo. This means that the photo will no longer be shown in the slideshow. If needed the photo can be shown again through the settings menu.

### **Fit to frame/Fill frame**

This toggles how the photo is shown.

The *Fill frame* option is the default. The photo is scaled so that it fills the whole screen. It will be centered around what is selected as the most important part. See the first picture below.

*Fit to frame* will make sure that the entire photo is shown on the screen. See the second picture below.



### ◀ ▶ Adjust photo

The adjust photo feature is only available when the photo is set to fill frame. It allows you to adjust the position of photo in the frame for an even better fit.

### Interacting with videos


When a video is shown two additional controls are shown. One for play/pause of the video and one for mute/unmute of the video.

Press  to start the video playback. Pressing  will pause the video playback.

Pressing  will mute the video while pressing  will unmute the video.

### Power menu

Tap the power icon  in the top right corner of the screen to access the power menu. Here you can power off using , restart your frame using  or enter sleep mode using .

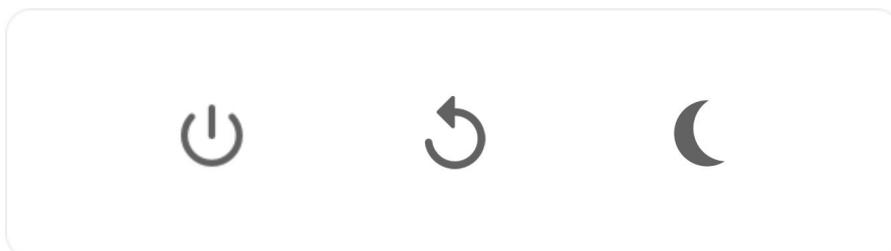

**NB. Make sure to always use the power off button on the device or in the power menu to turn Frameo off. Never disconnect power when Frameo is running.**

## Settings

Through the settings, you can personalize your frame to your needs.

### My frame

#### Frame name

Changes the name of your frame. This is also the name that connected friends and family will see in their list of connected frames in the smartphone app.

#### Frame location

Changes the location of your frame. This is the location displayed on your friends' and family's list of connected frames which can help to distinguish frames from each other.

#### Set language

Sets the language used on the frame.

#### Set time zone

Sets the time zone used on the frame.

#### Enable/Disable 24-hour format

Enables, and disables, 24-hour time format.

### Manage photos

In the manage photos menu you can see how many photos are on your frame and the storage they use. You can also see the amount of storage left available on your device for storing new photos.

#### Show/hide photos

Select which photos to hide by tapping them. Hidden photos will NOT be deleted from your frame and you can always select them to be shown again.

Use  to hide or show all photos.

### Delete photos

Select photos that you want to permanently delete from your frame by tapping the photo.

Use  to select or deselect all and  to permanently delete the selected photos.

### Import photos

Allows you to import photos from an external storage (e.g. microSD card).

Before you try to import photos, make sure you have an external storage (e.g. microSD card) inserted into your frame with the photos you wish to import.

Start by selecting the photos that you want to import onto your frame. Once selected tap the import button  to start the import process.

Use  to select or deselect all photos on the external storage (e.g. microSD card).

Use  to set the sort order of photos before import and  to order by ascending/descending.

*It is currently not possible to add a caption or define the most important part of the photo when using the import function. An alternative for this is to add yourself to your friend list and send the photos using the app.*

### Export photos

Allows you to export photos from the frame to external storage (e.g. microSD card).

*The export function will export all photos on the frame as well as profile pictures.*

## My Friends

This list contains all the connected friends that are allowed to send photos to your frame.

### Change options for a friend

Click the options icon  to open the friend options menu. From here you can allow / disallow if a friend may share the code to the frame. If this is enabled the friend can retrieve and share the code to the frame from his/her app.

From the options menu you can also delete a friend, by pressing the DELETE FRIEND button. This will remove the friend from the list and thereby remove their permission to send photos to the frame. You will then be asked to confirm the removal and if you would like to remove all photos previously received from this friend.

## Add person

To allow a new person to send you photos, simply tap the add friend button  and share the presented code in whatever way you prefer.

## Display

### Brightness level

Adjust the brightness level of the screen.

### Sleep mode

Frameo offers a sleep mode which turns off the screen to reduce power consumption. The default setting is to turn off the screen at 23:00 and turn on the screen again at 07:00. To change this just set the sleep mode start/end time.

*Your frame is not powered down or in standby, so you will still be able to receive photos during sleep mode.*

## Slideshow

### Timer

Set the duration that a photo should be displayed before showing the next photo.

### Show caption

Sets whether or not to display the captions that your friends have sent with the photo. Check to display captions. Uncheck to hide captions.

### Fill frame

Sets the default frame photo setting. Check to set default to fill which makes the photos fit the device screen according to the most important part of the photo. Uncheck to make the photo fit inside the screen of the device, adding blurred bars on the sides or top/bottom

### Photo display order

Sets the order in which your photos are displayed on the frame.

- By date: Photos are shown newest to latest.

- Shuffle: Photos are shuffled and shown in a random order.

### Autoplay

Enables/disables autoplay of videos in the slideshow. Videos can always be manually started regardless of this setting.

### Video playback

Determines how videos should be played when autoplay is enabled.

- Loop videos: The video will loop until the slideshow timer is up.
- Play once: The video will play once and show it's thumbnail until the timer is up.
- Play once and continue: The video will play once and continue to the next photo, or video, once it completes.

### Playback audio

Sets the default audio playback behaviour of videos in the slideshow to ON or OFF. Audio can always be manually enabled/disabled regardless of this setting.

### Video volume

Adjust the volume level for video sounds on the frames.

### Wi-Fi

Set which Wi-Fi the frame connects to. If you are connecting to a network with a captive portal

Connection status will say that Wi-Fi login is required and show . Tap this to open a login screen where you can enter credentials to access the network.

### Wi-Fi details

Use  to show details about the current connected Wi-Fi.

### Reset Wi-Fi

Use  to delete all Wi-Fi information and restart your frame.

## Notifications

### Show notifications

Enables/disables whether notifications are shown in the slideshow (e.g. when a new photo is received).

### Notification volume

Adjust the volume level for notification sounds.

### Storage space

Enables/disables notifications shown when frame storage is low.

### Backup

Enables/disables notifications shown if automatic backup has failed.

### Network connection

Enables/disables notifications showing network connection status.

### New photos

Enables/disables notifications shown when receiving new photos.

### New friends

Enables/disables notifications shown when new friends are added.

### Software update

Enables/disables notifications shown when a software update has been installed.

### Feature news

Enables/disables notifications shown when new exciting features are added.

## Backup and Restore

### Backup frame to external storage (e.g. microSD card)

Tap to make a backup of your photos, friends and settings. The time of the latest successful backup is also displayed here.

*Any existing backup on the external storage will be overridden!*

### Automatic backup

If checked, your frame will automatically take a backup within 30 hours of receiving new photos or making changes to your frame.

### Restore from backup

*Before you attempt to restore your frame, start by confirming that your backup is up-to-date. This is done by confirming the date under “Backup frame to external storage (e.g. microSD card)”. If e.g. the last backup is too old or if no backup is made, then press the “Backup frame to external storage (e.g. microSD card)” button to make a new backup.*

*It is important to note that you cannot restore a backup to a new Frameo frame and keep the old frame operational at the same time.*

If you wish to restore a backup on a frame that has already been setup, then you must first reset the frame. This is done by pressing the “Reset frame” button. This will delete all data on the Frameo and reset the Frameo to its setup screen.

On the setup screen you can select the “Restore from backup” button which will restore your frame according to the backup.

If the “Restore from backup” button isn’t visible, then confirm that the external storage (e.g. microSD card) is correctly mounted.

### Reset frame

Removes all data from your frame.

*This will permanently remove all your photos, friends/connections and settings.*

## Help

### Open source libraries

Opens a list of open source libraries used in the app and their licenses.

### **Share anonymous analytics data**

Sharing anonymous analytics data helps us tremendously to improve the Frameo software. We understand if you do not wish to share this data with us. Keep it checked if you wish to help us improve Frameo. Set unchecked to deny the sharing of anonymous analytics data.

### **Guide**

Opens the quick start guide, that was shown when you first started the frame.

### **About**

#### **Android version**

See what version of Android that is installed on the frame.

#### **Peer ID**

This is a unique ID for your photo frame. When contacting our support, please provide this ID with your message.

#### **MAC**

Shows the MAC address of your frame.

#### **Frameo version**

Shows what version of the Frameo software is currently installed on your frame.

#### **Up time**

Shows how long the photo frame has been powered on.

#### **Check for update**

Check if an update is available for your frame.

#### **Beta program**

If checked the device will join the Beta program where it will receive updates more frequently and before normal release devices.

## Privacy

For more information regarding privacy of the Frameo App, please visit <http://privacy.frameo.net>

## Support

Please visit <http://frameo.net/helpcenter> for FAQ, support and to provide feedback about the Frameo App.

## Warranty, Compliance, Support and Safety information

For more information regarding warranty, hardware compliances, support and safety please visit [www.innovu.nl](http://www.innovu.nl)